


# Ductile Caster for Standard Type

## Rubber Caster

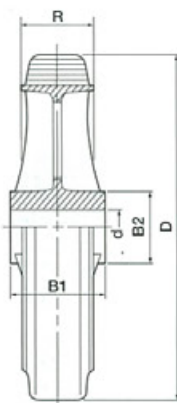

### A Rubber (non-bearing)

unit:mm


Wheel diameter	Type	Load capacity	Wheel width	Hub length	Axle hole diameter	Boss diameter
75	75A	70 kg	32	37	10	21
100	100A	100 kg	35	44	12	23
125	125A	150 kg	38	49	17	32
150	150A	180 kg	40	53	20	35
180	180A	200 kg	42	54	20	35
200	200A	220 kg	44	57	20	35
230	230A	270 kg	46	60	25	47
250	250A	300 kg	48	63	25	47
300	300A	350 kg	50	67	25	47

### B Rubber (with bearing)

unit:mm

Wheel diameter	Type	Load capacity	Wheel width	Hub length	Axle hole diameter	Boss diameter	Bearing No
75	75B	70 kg	32	37	10	40	CB1030
100	100B	100 kg	35	44	12	41	CB1232
125	125B	150 kg	38	49	17	48	CB1740
						57	CB2047
150	150B	180 kg	40	53	20	56	CB2047
180	180B	200 kg	42	54	20	56	CB2047
200	200B	220 kg	44	57	20	57	CB2047
						61	CB2552
230	230B	270 kg	46	60	25	62	CB2552
250	250B	300 kg	48	63	25	62	CB2552
300	300B	350 kg	50	67	25	62	CB2552
						75	#6206

## Urethane Caster

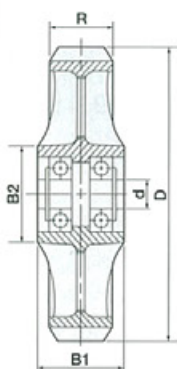

### ULB Urethane (with bearing)

unit:mm

Wheel diameter	Type	Load capacity	Wheel width	Hub length	Axle hole diameter	Boss diameter	Bearing No
75	75ULB	140 kg	30	38	10	37	CB1030
100	100ULB	210 kg	33	44	12	44	CB1232
127	125ULB	280 kg	36	49	17	49	#6303
150	150ULB	350 kg	38	53	20	53	#6204
180	180ULB	430 kg	42	53	20	53	#6204 CB2047
200	200ULB	490 kg	42	57	20	57	#6204
250	250ULB	650 kg	46	63	25	63	#6305
300	300ULB	830 kg	48	67	25	67	#6305